

Spare Parts List

Mobius® Breez Microbioreactor

Millipore
SIGMA



MilliporeSigma is the U.S. and Canada Life Science business of Merck KGaA, Darmstadt, Germany.

www.SigmaAldrich.com

Millipore®
Preparation, Separation,
Filtration & Testing Products

Spare Parts

To help you select and manage the spare parts required for your system, our experts have performed a risk assessment to determine which parts to keep in stock.

The risk assessment is based on our experience; each customer must perform their individual risk assessment for their process, to ensure alignment with our strategy, and review the stock requirements accordingly.

As a result of this risk assessment, we defined 3 categories of spare parts:

Type of parts	Description	Stock recommendation
Preventive maintenance (PM) parts	These are parts that are subject to wear and tear and that we recommend replacing on a regular basis. Under average usage conditions, these parts should be replaced at least once per year. A risk assessment based on the specific system usage and production conditions may result in a need to replace some for all of these parts more frequently. Not replacing wear and tear parts as recommended can impact system functionality and may result in system shutdown.	1 part per unit
Critical parts	These parts have been identified as most critical to avoiding system downtime and are recommended to be kept in stock for immediate availability.	1 part per unit
All other parts	All other individual parts.	Risk-based customer decision

Based on our risk analysis, preventive maintenance and critical spare parts are essential to keep your equipment running. We recommend keeping preventive maintenance and critical spare parts in stock.

For additional information, please visit: [SigmaAldrich.com](https://www.sigmadrives.com)

Spare Parts List

Number #	Catalogue number	Description	Preventive Maintenance (PM*), Critical**, Others	Field service required***	Frequency
1	BRZSLFTST	Mobius® Breez Self-Test Cassette	PM	No	Every 12 months
2	BRZPHR0BE	Probe, pH for External Meter	Critical	No	As required
3	BRZPNCBL	Mobius® Breez Pneumatic and Power Cable Assembly	Critical	No	As required
4	BRZMBHFUSE4A	Pack of 5 FUSES, 4A, 125 VAC	Critical	Yes, for installation	As required
5	BRZLONGCLAMP	PIBA clamp Assembly Long	Critical	No	As required
6	BRZSHORTCLAMP	PIBA clamp assembly Short	Critical	No	As required
7	BRZSOLENOID	5V Solenoid with 3 barbed ports	Critical	Yes, for installation	As required
8	BRZMBHFUSE1A	Mobius® Breez Pack of 5 Fuses, 1A, 125 VAC	Critical	Yes, for installation	As required
9	BRZTUBEKT	Mobius® Breez Exterior Tube Spare Kit	Other	Yes, for installation	As required
10	BRZSCRWKT	Mobius® Breez Exterior Screws Spare Kit	Other	Yes, for installation	As required
11	BRZCORDAUS	Mobius® Breez Power cord pack – AUS	Other	No	As required
12	BRZCORDCN	Mobius® Breez Power cord pack – CN	Other	No	As required
13	BRZCORDEU	Mobius® Power cord pack – EU	Other	No	As required
14	BRZCORDUK	Mobius® Power cord pack – UK	Other	No	As required
15	BRZMCM001BR	Mobius® Breez POD	Other	No	As required
16	BRZSBP020BR	Mobius® Breez Software & Computer	Other	No	As required
17	BRZSTCONKT	Mobius® Breez Gas Connection Kit	Other	No	As required
18	BRZUSBCON	Mobius® Breez USB Cord Assembly	Other	No	As required

* Preventive Maintenance (PM) parts are subject to wear and tear. Under average usage conditions, they should be replaced at least once per year. A risk assessment based on the specific system usage and production conditions may indicate replacement of some or all of these parts more frequently.

** Critical parts have been identified as most critical to avoiding system downtime and are recommended to be kept in stock for immediate availability.

*** Replacement and/or setup need to be made by a trained technician.

For both PM and critical parts, stock recommendation is 1 part per unit.

Spare Parts List


Number #	Catalogue number	Description	Preventive Maintenance (PM*), Critical**, Others	Field service required***	Frequency
19	BRZBARC0D	Mobius® Breez Bar Code Scanner w Cord	Other	No	As required
20	BRZBSP0W	Mobius® Breez Base Station Power Supply Assembly	Other	No	As required
21	BRZC02P0W	Mobius® Breez CO ₂ Box Power Supply Assembly	Other	No	As required
22	BRZFTKT	Mobius® Breez Base Station CO ₂ Box Rubber Feet Repl Kit	Other	No	As required
23	BRZJAF0V	Mobius® Breez Light Blocking Cover	Other	No	As required
24	BRZPRECAP	Mobius® Breez Pressure Cap (pneumatic)	Other	No	As required
25	BRZMBS004BR	Mobius® Breez Base Station Assembly	Other	Yes, for installation	As required
26	BRZPHC001BR	Mobius® Breez CO ₂ Box Assembly	Other	Yes, for installation	As required

* Preventive Maintenance (PM) parts are subject to wear and tear. Under average usage conditions, they should be replaced at least once per year. A risk assessment based on the specific system usage and production conditions may indicate replacement of some or all of these parts more frequently.

** Critical parts have been identified as most critical to avoiding system downtime and are recommended to be kept in stock for immediate availability.

*** Replacement and/or setup need to be made by a trained technician.

For both PM and critical parts, stock recommendation is 1 part per unit.

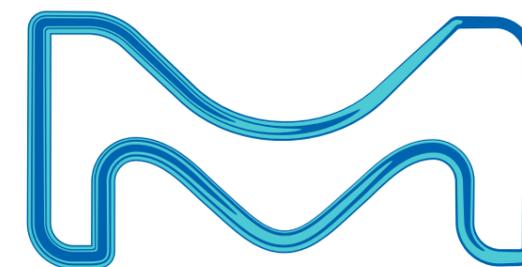

For more information, please visit www.SigmaAldrich.com