




Montage PCR₉₆ Cleanup Kit

Overview of Procedure

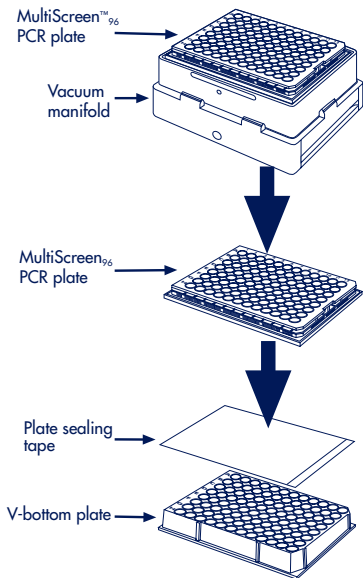

1. Load PCR samples into MultiScreen₉₆ PCR plate.
2. Place MultiScreen₉₆ PCR plate on top of vacuum manifold.
3. Apply vacuum for 5–10 minutes.
4. Resuspend samples. (Mix vigorously.)
5. Transfer samples to V-bottom plate for storage. Seal wells with sealing tape.

montage™
life science kits

MILLIPORE

Millipore is a registered trademark of a Millipore company.
Montage and MultiScreen are trademarks of a Millipore company.

P36322 Rev. —, 10/00